


Installation Instructions

Installation.

1. Connect trap to the bath waste, ensuring the washer is in place.
2. Cut the outlet bend to the required length (for wall or floor outlet).
3. Slide the free nut onto the outlet bend, flanged side first.
4. Place the washer & rubber seal onto the outlet pipe.
5. Tighten the free nut onto the trap.
6. Fit the flange over the short end of the outlet bend.
7. Check for leaks.
8. Push the flange against floor or wall.

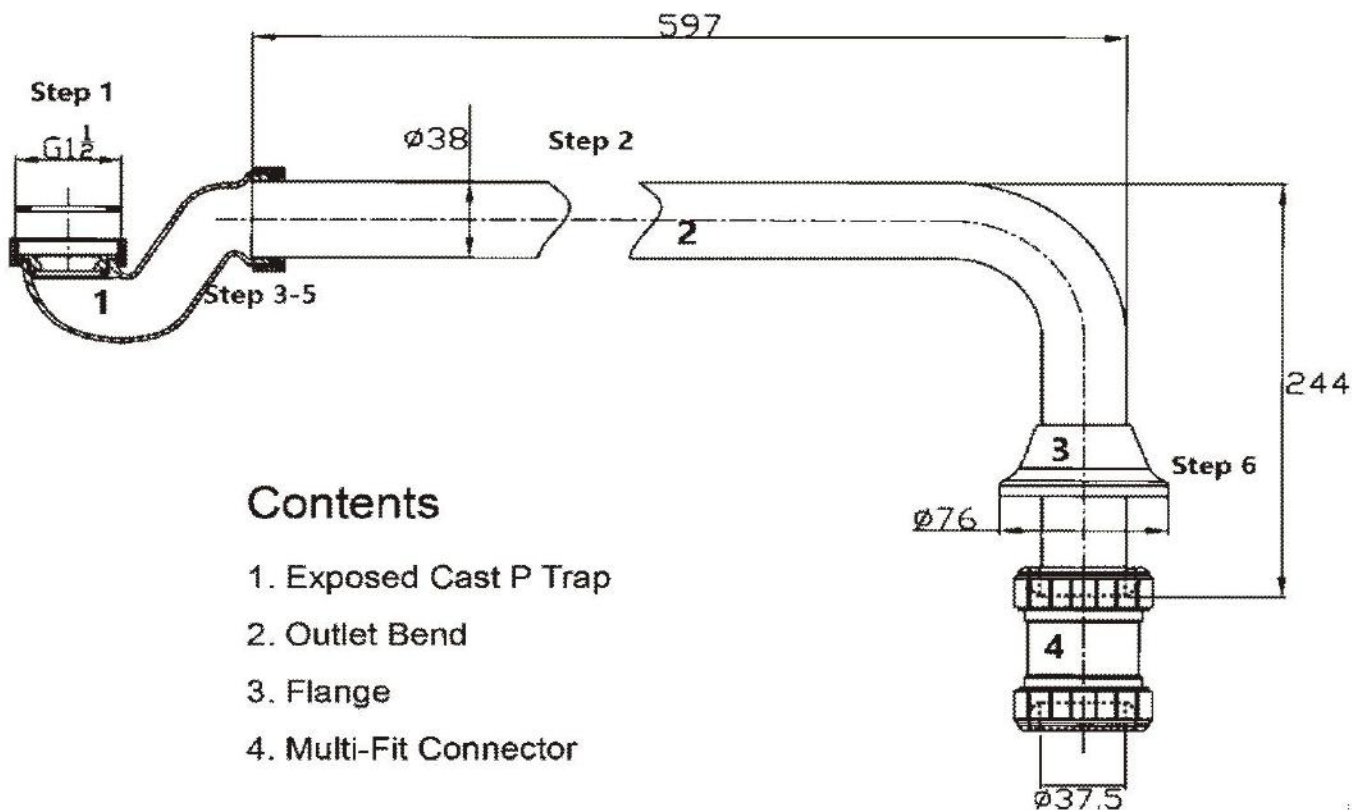

Contents

1. Exposed Cast P Trap
2. Outlet Bend
3. Flange
4. Multi-Fit Connector

